


# Dryer Quick Start Guide

We know you're excited about owning an ASKO tumble dryer and you're anxious to get started, so here is a brief summary of the operating procedures. To get the most of the features of your machine, we recommend that you read your *Use and Care Guide*.

## THE CONTROL PANEL

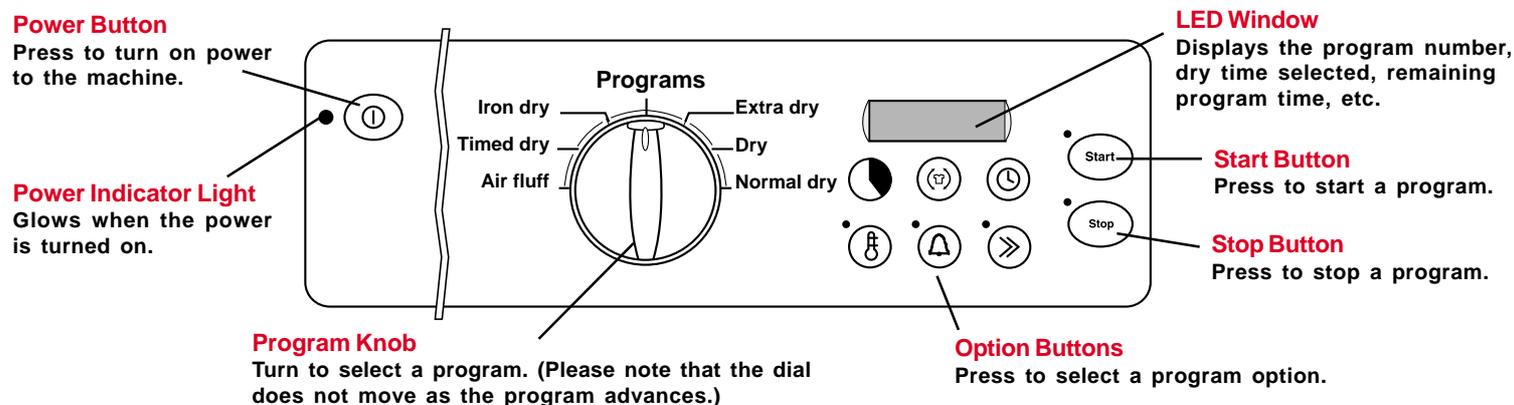

### Power Button

The Power button turns the power to the machine on and off. When the power is on, the power indicator light glows red. The power must be on before you can start the machine.

### Program Knob

Turn this knob to the desired program (described in the table below). Please note that the knob does not move as the program advances.

### Option Buttons

The option buttons allow you to select program time, normal or low temperature, anti-crease, delayed start, buzzer and quick cooling. Each option is defined in more detail on the following page.

### Start Button

Once you've selected the program and options, press this button to start the dryer. The red indicator light next to the button will come on. It will go off when the program ends.

### Stop Button

To stop a program, press and hold this button down until the indicator light goes off.

### Interrupting or Cancelling a Program

If you want to interrupt a program to load or remove an item after you have started the dryer, simply open the door and the dryer will stop automatically. To restart the dryer, close the door and press Start. The program will continue from the point it was interrupted. (Note: If the door remains open for more than two minutes, the program is cancelled.)

To cancel a program or an option, press and hold the Stop button until the indicator light goes off (approximately 3 seconds). If you stop the dryer this way, you will have to reselect the program and options then press Start. The program will start from the beginning.

## PROGRAMS

Your ASKO dryer has six programs. It is important that you select the appropriate program for the type of load you are drying. Refer to the table below for recommendations.

Program	Definition
Extra dry (P1)	For items that are extremely difficult to dry, such as jeans and thick towels.
Dry (P2)	Cotton w/out elastic and/or decorative trim.
Normal dry (P3)	Cotton with elastic and/or decorative trim, linen (white and colorfast).
Iron dry (P4)	Synthetics, polyester, cotton/polyester blends.
Timed Dry	Any fabric that can be machine dried. (See note below.)
Air Fluff	This setting does not heat. It simply circulates the air as the dryer tumbles to shake out the dust and refresh the clothes. (See note below.)

**NOTE:** When using Timed Dry and Air Fluff, you must set the number of minutes for the program to run. (See "Time" in the "Option Buttons" section on the next page for details.) When using Timed Dry, it is best to use a shorter time; then if the load isn't dry, you can set the time for a few more minutes.

# QUICK START PROCEDURES

T731

1. Press the Power button to turn on the machine.
2. Load the laundry into the dryer.
3. Clean the lint filter (see below).
4. Check that the door is clear of laundry then close it firmly. (The door won't shut if it's slammed.)
5. Turn the Program knob to the desired program.
6. Select desired option(s).
7. Press Start. The machine will start.

## Options

-  **Time** If you set the program knob to Timed Dry or Air Fluff, you must select the length of drying time by pressing this button until the number of minutes you wish to dry the load displays. The time advances in 5-minute increments and you can select between 5 and 90 minutes.
-  **Anti-crease** The Anti-crease option prevents garments from wrinkling if they're not removed right away. You can select 1, 2, or 3 hours by pressing this button until the number of hours you prefer displays (e.g., 1h). The drum will rotate once every minute at the end of the program for the number of hours you select or until you press Stop or open the door.
-  **Delayed Start** This option lets you delay starting the program from 1 to 24 hours. Press this button until the number of hours you wish to delay displays (e.g., 1h) then press Start. If you change your mind before you press Start, press Delayed Start button until "0" displays. To cancel Delayed Start after you press Start, press and hold the Stop button until the LED displays the program number or the number of minutes.
-  **Temperature** You have two temperature options: Normal and Low. The Normal setting is for heavier fabrics, such as denim, cotton, linen, etc. Low is for lighter, more delicate fabrics, such as synthetics, permanent press, etc. The indicator light will stay lit when Low is selected. It will remain off when Normal is selected.
-  **Buzzer** Press this button to set a buzzer to sound for three seconds when a program is complete. The indicator light will stay lit when this option is on. If you select Anti-crease, the buzzer will sound every time the drum rotates.
-  **Cool-down** Every program except Air Fluff ends with a cool-down cycle that tumbles the clothes without heat to reduce wrinkling. This button lets you set a Normal cool-down cycle (15 minutes) or a Quick cool-down (5 minutes). The indicator light will stay lit when Quick is selected.

**NOTE:** The dryer is programmed to retain the option settings last selected with each program.

## UNDERSTANDING THE LED WINDOW


The LED window displays the program number for the automatic programs (i.e., P1 = Extra Dry; P2 = Dry; P3 = Norma Dry; P4 = Iron Dry). When you select Timed Dry, the LED displays the number of minutes selected plus the cool-down time. When you select Air Fluff, the LED displays the number of minutes selected. With Timed Dry and Air Fluff, as the program advances the LED displays the remaining time. "End" on the LED indicates the program is complete. "C" indicates the program is in the cool-down cycle.

## CLEANING THE LINT FILTER

Although the lint in your ASKO dryer will be minimal, the lint filter should be cleaned after each load to ensure maximum air flow and prevent possible overheating. To clean the filter, follow the steps below:

1. Grasp the handle and pull it toward you.
2. Remove the filter from the holder by pulling it up.
3. Open the filter and gently brush away any lint.
4. Fold the filter together and return it to the holder on the door.
5. Push the holder in until it snaps into place.

**NOTE:** We recommend that you clean the lint filter after every load.

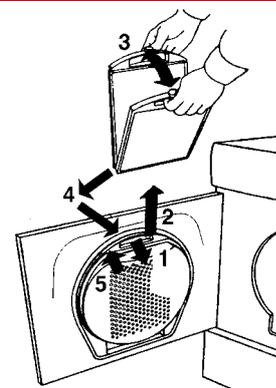

## OVERHEATING PROTECTION

The dryer has a protection device that shuts the machine off if the temperature becomes too high. Overheating could occur if the lint filter is clogged or the fan needs to be cleaned. If the dryer shuts off during a program, first check the lint filter. If the filter is clean, the fan may need to be cleaned. See page 3 in your *Use and Care Guide* for more details.

Refer to your *Use and Care Guide* for additional programming and operational information as well as care and cleaning instructions.