electronic shower system

Owner's Manual









Here are your ESS Serial Numbers. Refer to them when contacting Customer Service at 1 800 423 9485 ext. 420.

PLUMBING ACCESSORIES ALSO USTED AS PLUMBING FIXTURE 761K

MADE IN USA IBD 3073

MFG DATE: 03 06 2006

INTERBATH, INC. 665 N. Baldwin Park Blvd. City of Industry, CA 91746-1502 800 423 9485 - FAX 626 369 3316

www.ondineshowers.com

electronic shower system

Owner's Manual












Here are your ESS Serial Numbers. Refer to them when contacting Customer Service at 1 800 423 9485 ext. 420.

Operating Instructions

. To turn the system on, press any of the spray buttons or preset buttons.

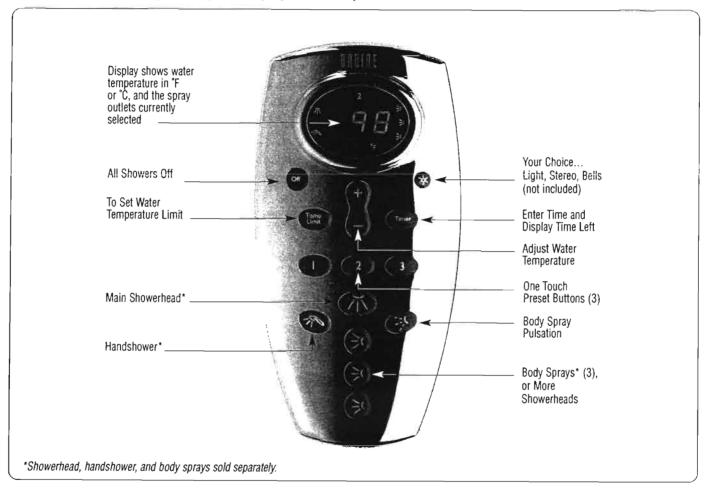

[Special Convenience Feature]

Toggle between Celsius (°C) and Fahrenheit (°F):

- · Turn the system off.
- Press and hold the "Temp Limit" button while pressing the "Timer" button at the same time.

[Error Mode Alert]

- E1 Battery defect, does not recharge.
- **E2** Cable broken at the "Potentiometer Feedback" of the motor valve.
- **E3** Valve is "frozen" or motor is unable to turn the thermostatic valve.
- **E4** ESS is operating with backup battery.
- E5 Temperature Sensor Cable is disconnected.

Flashing E3/E5 Interface Cable disconnected.

Button Reference

Button Icon	Button Name	Instructions
()A	Off	Turns off the ESS system. [NOTE: This button will not turn off an additional device.]
*	Additional Device	Operates an additional device such as a light, stereo, or bell (not provided by Interbath).
Temp Limit	Temperature Limit	Displays your system's maximum water outlet temperature. ESS is factory preset at 98°F (37°C). The system temperature range is between a minimum of 68° F (20° C) and a maximum of 113° F (45° C). To adjust your system Temperature Limit: • Press the OFF button.
		 Press the TEMP LIMIT button and hold until your system temperature limit is displayed in the window. Use the + or - button to change your system temperature limit. The new system temperature limit is displayed as you press these buttons.
(+)	+ Button	Primary Function: Increases water temperature. Increases timer settings, temperature limit, and pulsation frequency when used following these functions.
(-)	- Button	Primary Function: Decreases water temperature. Decreases timer settings, temperature limit, and pulsation frequency when used following these functions.
Timer	Timer	Displays remaining time left until system tums off. The time range is between 5 minutes to 55 minutes. ESS is Factory Preset at 20 minutes.
		To adjust your system's Time Limit: Press the OFF button. Press the TIMER button and hold. Use the + or - button to adjust your system time limit in 5 minute increments.
	Preset 1	Stores preset shower settings into memory. To Store Settings in Memory: With ESS turned on, select your shower(s) and temperature setting. To store in memory, press the 1 button and hold down for two seconds. The temperature indicator on the display window flashes once to indicate the setting is stored.
2	Preset 2	Sets and stores a second shower setting. See directions for Preset 1, substituting the 1 button with the 2 button.
3	Preset 3	Sets and stores a third shower setting. See directions for Preset 1, substituting the 1 button with the 3 button.
(I)	Showerhead	Turns showerhead On or Off.
(P)	Handshower	Turns handshower On or Off.
	Pulsation	Engages or disengages the body spray pulsation feature. The pulsation range is between 1/2 second to 4 second intervals.
		ESS is Factory Preset at 2 seconds.
		To adjust the Pulsation Interval: • Press the PULSATION button and hold. • Use the + or - button to adjust pulsation intervals in 1/2 second increments.
(30)	Body Sprays	Turns body sprays On or Off.
	Display Window	Displays current settings such as water temperature and selected showers.

Ondine Residential Warranty

ONDINE provides the following warranties on its products to the original consumer purchaser, installed in residential applications. This warranty is effective for all products purchased after January 1, 2001.

Mechanical Warranty: A limited Lifetime Warranty is provided on all mechanical parts. ONDINE warrants all mechanical parts to be free from manufacturing defects in material and workmanship under normal use for as long as the original consumer purchaser owns the part.

Finish Warranty: A limited Lifetime Warranty is provided on all ONDINE product finishes to the original consumer purchaser against manufacturing defects in material and workmanship.

Electrical Components Warranty: A one-year Limited Warranty is provided on all electrical components to the original consumer purchaser against manufacturing defects in material and workmanship.

At its discretion, ONDINE will repair or replace any part that proves to be defective in material and/or workmanship under normal installation, use and service.

This warranty is extended to the original consumer purchaser and does not cover installation or any other labor charges and shall not apply to any products or any parts of products which have been:

- 1. Repaired by an unqualified person, or repaired not using original ONDINE replacement parts, or altered in any manner not previously authorized in writing by ONDINE; or,
- 2. Damaged as a result of misuse, negligence, accident or faulty installation or maintenance; or,
- 3. Installed or used in a manner contrary to ONDINE's written instructions; or,
- 4. Damaged by the effects of dirt, hard water deposits, marine climate or through the use of inappropriate cleansers.

ONDINE does not make any other warranty of any kind. This warranty excludes all industrial, commercial or business usage. See Commercial Products Warranty for details.

ONDINE Commercial Products Warranty

ONDINE warrants its products installed in commercial applications to be free from manufacturing defects for a period of 5-years from the purchase date by the original owner.

All other terms and limits of the Residential Product Warranty apply.

To obtain warranty repair or replacement, the faulty part must be sent with the proof of purchase (original sales receipts) from the original consumer purchaser to:

~

Call 800-423-9485 toll-free for quick assistance with any installation, parts or service needs.

Interbath, Inc. 665 North Baldwin Park Blvd., City of Industry, CA 91746-1502, USA

Tel: 626 369 1841 Orders: 1 800 423 9485 Fax: 626 369 3316

Interbath, Inc., Canada 5556 Tomken Road, Mississauga, Ontario L4W 1P4, Canada

Tel: 905 624 3009 Orders: 1 800 661 5361 Fax: 905 624 0796

Interbath, Inc., Australia P.O. Box 677, Mulgrave North, Victoria 3170, Australia

Tel: 03 9558 0655 Orders: 1 800 648 753 Fax: 03 9558 0675

Web Site www.ondineshowers.com